

EPOCH 650 Upgrade Instructions

The EPOCH 650 can be upgraded directly from a microSD card. Below are step-by-step instructions for performing an upgrade with the instrument.

REQUIRED EQUIPMENT

- microSD card
- AC charger/ adapter
- Upgrade Files

IMPORTANT NOTES

- Instrument **must** be connected to AC power during upgrade
- Upgrade files downloaded from the web are compressed (“zipped”) and **must** be extracted before loading to SD card

UPGRADING THE EPOCH 650

1. Copy *extracted* files onto SD card, and insert into instrument
2. Plug instrument into AC charger/adapter and turn ON
3. Navigate to the INST SETUP menu and press **P2** for About
4. In the About menu, press **P5** for Upgrade
5. Select *Ext. SD Card* in the Upgrade From row
6. Press **P1** to start the upgrade

A progress bar will indicate status of the instrument. **DO NOT TURN OFF THE EPOCH 650 DURING THE UPGRADE PROCESS.** Instrument will power off automatically when upgrade is complete.

