



Your Vision, Our Future

How to Update the OmniScan


Software version MXU X.X

OmniScan Product Management Team


How to install the proper software on the OmniScan

- **Download the latest software installer**

- Go to the Olympus-ims website using the following link
 - <http://www.olympus-ims.com/en/service-and-support/downloads/>
- Select OmniScan, then OmniScan MX2 and SX

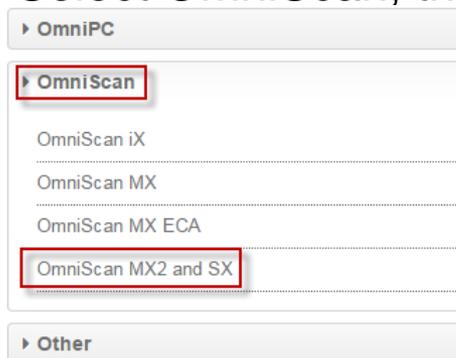



- Download the desired language for your instrument and extract the contents of the zip file in the desired folder

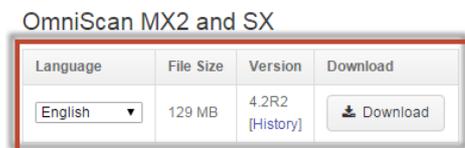


- Step 1: Click on the link to start downloading the zip file.
- Step 2: Enter your login to continue.
- Step 3: Save the zip file to your computer (NOT directly to the SD® card).
- Step 4: Extract the content of the zip file to a folder.
- Step 5: Execute the "InstallOmniScan.exe" application.

How to install the proper software on the OmniScan

- **Install the MXU software on your OmniScan's SD card**
 - Remove the SD card from the OmniScan and insert it in your computer

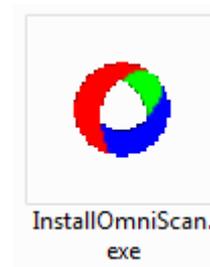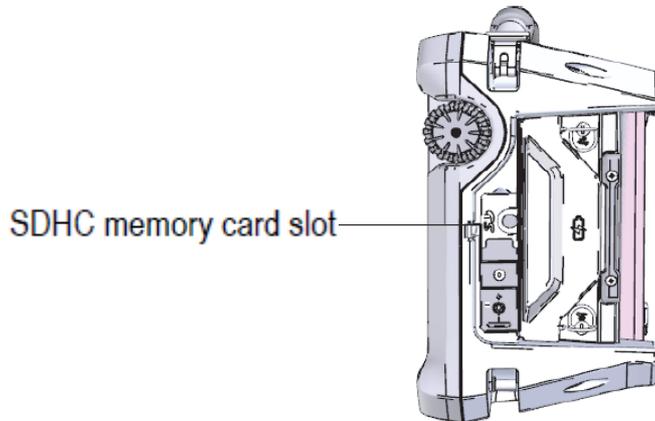

- Run the OmniScan installer and follow the instructions
- At the Destination Drive step, make sure to select the correct one that corresponds to your SD card location

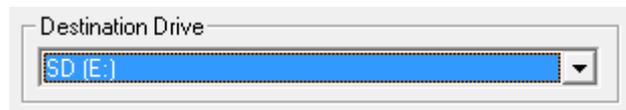

- Start the installation

How to install the proper software on the OmniScan

▪ Update of the OmniScan instrument

- Insert the SD card back into the OmniScan.
- Connect the OmniScan to the sector using the provided power supply
- Press the Power button




- Wait for the OmniScan Launcher screen to come up
- NOTE: If the following button appears at the Launcher screen, **the update must be performed before loading any software.**



How to install the proper software on the OmniScan

- **Update of the OmniScan instrument**
 - Select the desired software.

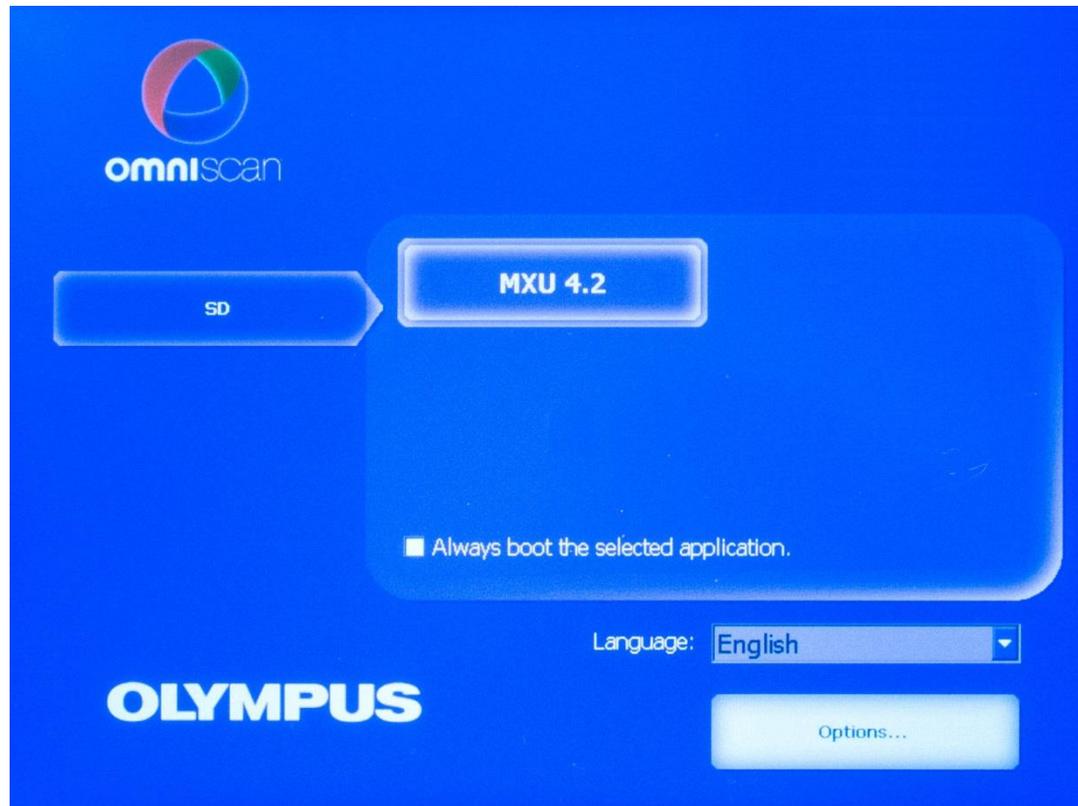

OLYMPUS

Your Vision, Our Future

Thank you